


Digital Kitchen Scale

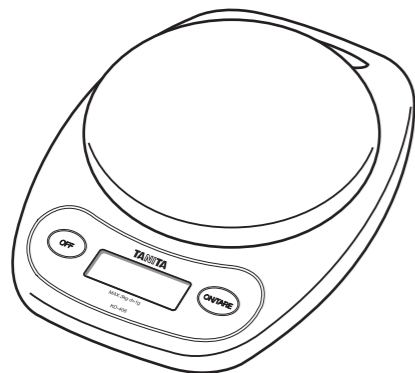

Model KD-406

- (ENG) **Instruction manual**
- (F) **Mode d'emploi**
- (E) **Manual de instrucciones**
- (P) **Manual de instruções**

Digital Scale Instruction Manual


(ENG)

Notice

- Do not dismantle the unit.
- Avoid using chemicals to prevent creating a hazard.
- Use the unit on a firm, flat surface.


Name of parts

A	Tray
B	LCD Display
C	OFF button
D	ON/TARE button
E	Battery compartment

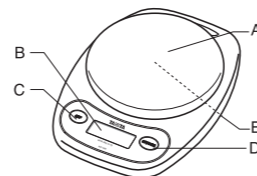

How to use

- Open the battery compartment cover (see figure 1) and insert 1 x "CR2032 (IEC)" or "5004LC" battery as indicated. NB. Make sure that the polarity of battery is correctly aligned.
- Press the ON/TARE button.
The display will show "8888".
Wait until the display shows "0" before proceeding to weigh item(s).
NB. Make sure you place item(s) in the centre of the tray.
If the weight of the item(s) exceeds the scale's capacity, "EEEE" will appear on the display.

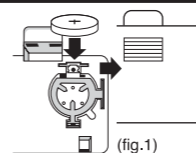

- Tare weighing function
The tare function allows you to add and weigh individual item(s) without removing contents of the bowl.
When the display shows "0", put the bowl onto the scale and press the ON/TARE button. The display will revert to "0" again.
Now add and weigh item(s), pressing the ON/TARE button before adding and weighing each individual item.
After removing the bowl at the end, the display will show a negative reading. Press the ON/TARE button to return the display to "0".
- Press the OFF button to turn off the power.
- Auto Power Off
The scale is designed with an auto power-off function for energy efficiency. If the same reading is displayed for more than 10 minutes the scale will automatically turn off.
- Battery Replacement
If "Lo" appears in the display when attempting to weigh, replace the battery (following previous instructions)

* Mode Change

When a weight mode change is desired, press ON/TARE and OFF buttons simultaneously to select each mode.

Care instructions and important notes

- The scale is a precision instrument. Do not dismantle the scale and avoid strong vibrations or shocks.
- Keep away from direct sunlight and heating appliances, eg. oven.
- When moving the scale to a new location, where the temperature differs from the previous location by more than 10°C (50°F), leave the scale in the new location for at least 2 hours before using it.
- Wipe the scale clean with a damp cloth.
- If the scale is not to be used for a long period of time, remove the battery.

Specification

Capacity	0 - 70oz / 0 - 2,000g	Minimum Graduation	0.05oz / 1g
----------	-----------------------	--------------------	-------------



This device features radio interference suppression in compliance with valid EC Regulation 2004/108/EC.

Mode d'emploi de la balance de cuisine numérique


(F)

Attention

- Ne pas démonter la balance.
- Ne pas utiliser de produits chimiques afin d'éviter toute explosion.
- Utiliser la balance sur une surface stable.


Nom des éléments

A	Plateau
B	Ecran à cristaux liquides
C	Bouton OFF
D	Bouton ON/TARE
E	Compartment à piles

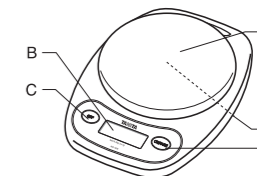

Instructions d'utilisation

- Soulevez le couvercle du compartiment à piles (voir figure 1) et insérez 1 pile de type "CR2032 (IEC)" ou "5004LC" selon les cas. Attention : assurez-vous que les piles sont placées correctement en respectant leurs polarités respectives.
- Appuyez sur le bouton ON/TARE.
L'écran affiche "8888".
Patientez jusqu'à ce que l'écran revienne à "0" avant d'effectuer une pesée.
Attention : placez le ou les objet(s) à peser au centre du plateau.
Si le poids du ou des objet(s) pesé(s) excède la capacité de la balance, le message "EEEE" s'affiche à l'écran.

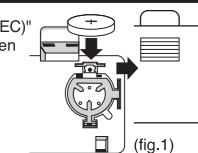

- Fonction Tare
Cette fonction vous permet de peser des objets séparément sans rien retirer du bol.
Lorsque l'écran affiche "0", placez le bol sur la balance et appuyez sur le bouton ON/TARE. L'écran affiche "0" à nouveau.
Vous pouvez à présent peser un ou plusieurs objets. Pour cela, appuyez sur le bouton ON/TARE avant de peser chacun des objets.
Lorsque vous retirez le bol du plateau, l'écran affiche un poids négatif. Appuyez sur le bouton ON/TARE pour revenir à "0".
- Appuyez sur le bouton OFF pour éteindre la balance.
- Dispositif de coupure automatique
Cette balance est équipée d'un dispositif de coupure automatique de courant en vue d'obtenir une efficacité énergétique maximale. Lorsqu'un même affichage reste à l'écran pendant plus de 10 minutes, la balance s'éteint automatiquement.
- Remplacement des piles
Si le message "Lo" s'affiche à l'écran lors d'une pesée, vous devez remplacer les piles. Reportez-vous aux instructions ci-dessus.
- * Changement de Mode
Quand un changement de mode de poids est désiré, appuyez simultanément sur ON/ TARE et OFF pour sélectionner le mode désiré.

Précautions d'utilisation et remarques importantes

- Cette balance est un appareil de précision. Ne la démontez pas et évitez toute vibration ou choc violents.
- Conservez l'appareil à l'abri des rayons directs du soleil et de toute source de chaleur, telle qu'un four, par exemple.
- Si vous déplacez la balance dans un lieu dont la température ambiante varie de 10°C, veuillez conserver la balance dans son nouvel emplacement pendant au moins deux heures avant de l'utiliser.
- Essuyez la balance à l'aide d'un chiffon humide.
- Si vous n'envisagez pas d'utiliser la balance pendant une longue période, retirez les piles de l'appareil.

Caractéristiques

Capacité	0 - 70oz / 0 - 2,000g	Graduation minimum	0.05oz / 1g
----------	-----------------------	--------------------	-------------



Cet appareil est conforme à la directive 2004/108/CE (compatibilité électromagnétique) en vigueur.

